




1. Stripping jacket for 30mm and put the 4 pair wires into IDC according to T568A/T568B color code.

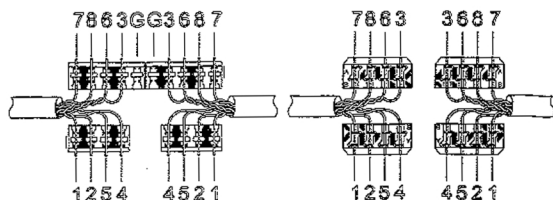

T568A WIRING	T568B WIRING
Pin 1 White/Green	Pin 1 White/Orange
Pin 2 Green	Pin 2 Orange
Pin 3 White/Orange	Pin 3 White/Green
Pin 4 Blue	Pin 4 Blue
Pin 5 White/Blue	Pin 5 White/Blue
Pin 6 Orange	Pin 6 Green
Pin 7 White/Brown	Pin 7 White/Brown
Pin 8 Brown	Pin 8 Brown
Pin G	Pin G

3.


(Unshielded Type)

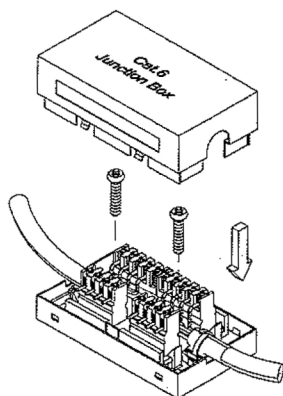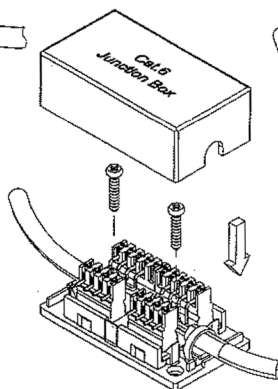

(Shielded Type)

2. Punching 4 pair wires by either 110D tool or krone/LSA tool and cut these extra wires.

(Unshielded Type)

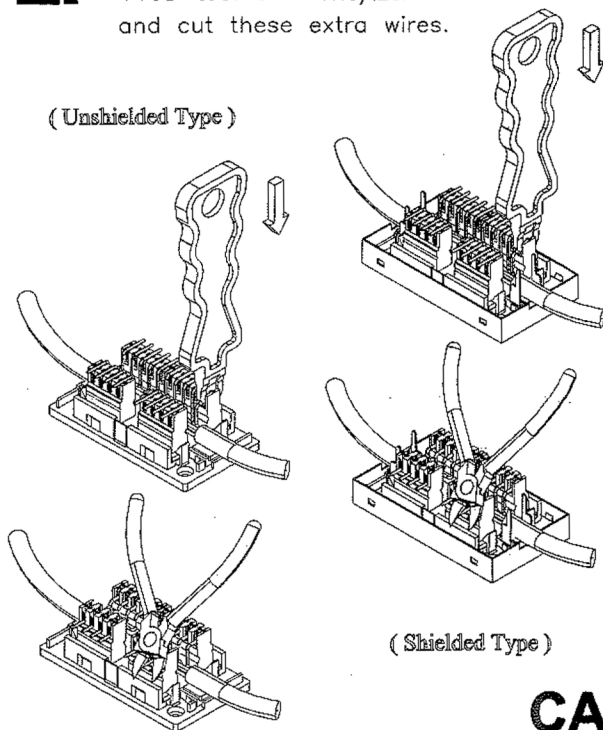

(Shielded Type)

Binding the cable by cable tie. Use the wall-screw to mount on the wall, snap the plastic or shielded cover on the base, then complete the installation.

CAT.6 Junction Box